

■ Instruction Manual: Driver Quick Reference Guide – RV360/HD360/CE360 Models Only

**Use Directional Arrows to Check Current Tyre pressures –
press 'S' (Set) button to dim the screen and show ON.**



'GREEN MEANS GOOD'

Static GREEN Light

Tyre Pressures are NORMAL.

Before driving, check the green light on the right side of the monitor.

This shows tyre pressure and temperature are normal.

High Temperature Warning



'HIGH WHEEL TEMPERATURE'

Panel indicates if a tyre has exceeded 80 degrees C. May be a brake problem, wheel bearing damage or debris caught in the wheel well.

Low Pressure Warning



'LOW TYRE PRESSURE'

Slow "PEEP" and Flashing RED Light

Low pressure alarm alerts the driver when the pressure drops from the set pressure by 12.5%, indicating a slow leak.

Rapid "PEEP" and Flashing RED Light

A second alarm alerts when pressure drops by 25%.

High Pressure Warning



'High Pressure'

Rapid "PEEP" and Flashing RED Light

High Pressure 25% above set pressure point.



'FASTLEAK- LOOSING TYRE PRESSURE'

Rapid "PEEP" and Flashing RED Light

The alarm panel indicates if a tyre is losing air pressure quickly. This may be caused by a tear or puncture in the tyre.



'LOST SIGNAL'

Static RED Light

Panel has been unable to receive a signal for more than 18 minutes. This may be temporary – but report to maintenance if situation continues.

Press ANY Button to silence audible alarms

IF IN DOUBT, ASK.

Department	Technical	Pages	1 of 1	Issue Date	19/01/2017
Completed by:	Jason Latham			Revision #	B
File Name	TIM-PUB-02-06-003.docx			Revision Date	8/12/2017