


■ Technical Bulletin: MICRO- SEPARATOR- WATER / SENSOR UNIT



Water / Contamination Sensor Unit

The Water / Contamination Sensor is used to monitoring and alarm so as to inform that the level of contamination in the Fuel Micro- Separator containment compartment is exceeded and requires servicing / draining.

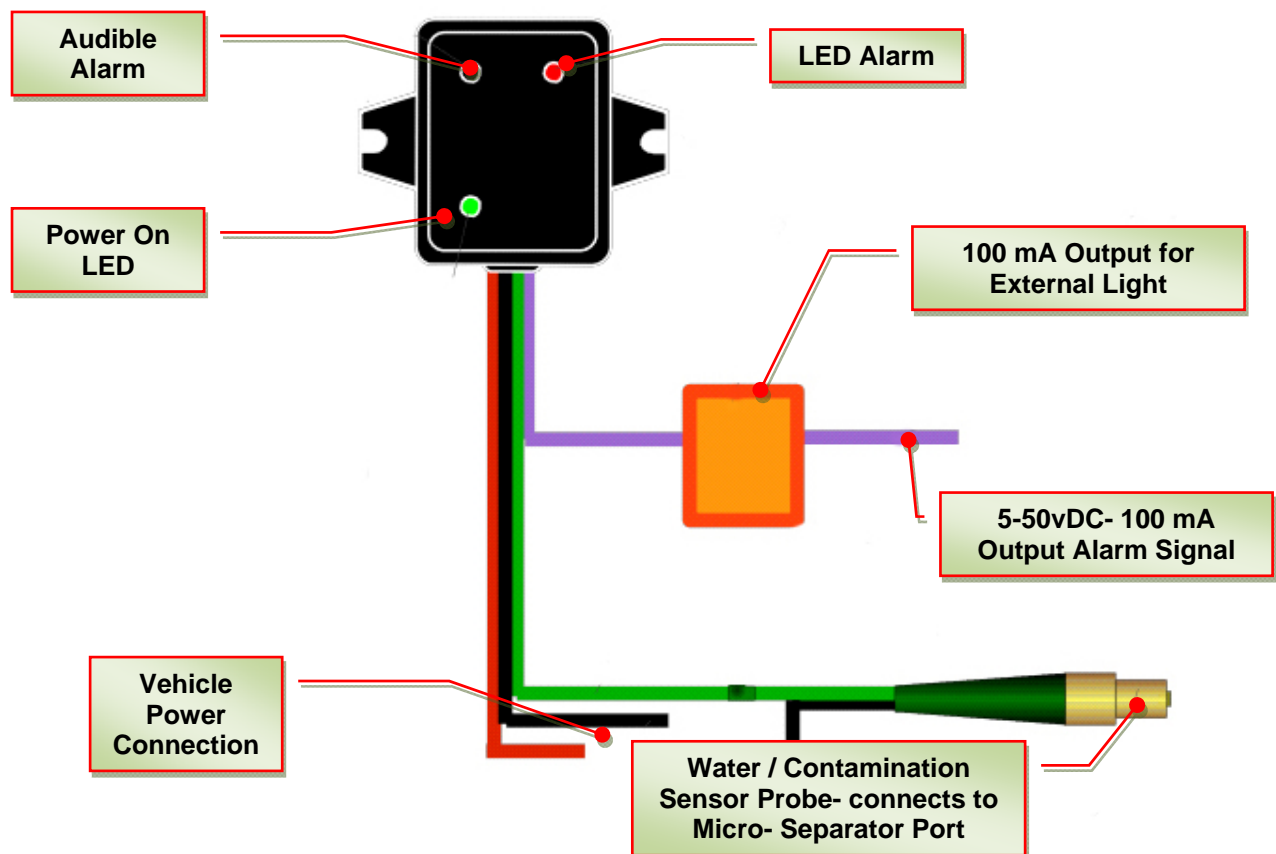

Alarm Sensor Kit: Use the Alarm / Water Sensor Kit to monitor the contamination level in your Micro-Separator. The Alarm / Water Sensor Kit is universal for 6- to 24 Volt systems, supplied with cables and fits straight onto Micro-Separator Port.

The Monitor Unit is located in the Operators Cabin, monitors the Water / Contamination level in the Miro-Separator Unit and warns the Operator when the level has exceeded in the containment compartment of the Micro- Separator and requires Servicing / Draining.

Department	Technical	Pages	1 of 1	Issue Date	25/11/2011
Completed by:	Peterw	Distribution	Customers / LSM Service Personnel	Revision #	
File Name	Water Sensor- v 1.0 LSM 251111.docx			Revision Date	